

HFB-FO-LON Series

Lonworks Fiber Optic Modem

Datasheet & User Manual



Table of Contents

- 1. Overview3**
 - 1.1 Introduction3
 - 1.2 Technical Specification.....3
 - 1.3 Warranty4
- 2. Installation5**
 - 2.1 Package Contents5
 - 2.2 Enclosure 5
 - 2.3 Install Method.....6
 - 2.4 Install Application7
- 3. Dimensions8**

1. Overview

1.1 Introduction

The LONWORKS Fiber Optic Modem is a multi-master and high performance Field bus Control System (FCS). Our Fiber Optic Modem uses the fiber cable as its transmission medium and utilizes Optical Fiber modulation/demodulation technology to changes the electric medium into a light medium transmission.

The LONWORKS Fiber Optic Modem product eliminates many of the disadvantages of copper cable. Examples of these disadvantages are EMI/RFI, ground loops (electrical isolation with fiber), high attenuation (high signal loss), short transmission distance between nodes of a system, and potential lightning damage.

The LONWORKS Fiber Optic Modem can be widely used, such as Industrial Controls, Intelligent Transportation Systems (ITS), Industrial Networking, Supervisory Control and Data (SCADA) and so on

1.2 Technical Specification

LON	
Connectors	Terminal
Standard	LONWORKS(LonTalk)
Data Rate	78.6Kbps
Extended Distance	0~20Km

OPTICAL	
Number of Fibers	2
Wavelength	850/1310nm(MM), 1310/1550nm(SM)
Fiber Type	62.5/125μm(MM), 9/125μm(SM)
Distance	0 ~ 2Km OR 0-20 Km
Connector Type	ST/PC or SC/FC

GENERAL	
Operating Temperature	-30~ 70°C / -30 ~ +158°F
Operating Humidity	0 ~ 95% non-condensing
Mean Time Between Failure (MTB)	> 70,000hrs
Power Supply Adaptor	DC24V
Dimensions (H × L × W)	125(L) × 110(W) × 36(H)

1.3 Warranty

- Repair
 - Please contact your local distributors when product is defective. Please apply RA in advance and prepay shipping cost when returning the defective product to us. We will pay the cost for sending it back to you.
 - Please attach a statement clearly describing the problem.
- We will repair defective product under warranty free of charge to our customer.
- 5 years warranty for product only.
- Any unauthorized modification of hardware and software voids the warranty.
- Warranty does not cover mishandling and/or abuse of the product.

2 Installation


2.1 Package Contents

- OneLonworksFiber Optic Modem
- One power supply adaptor
- One User Manual

Please contact dealer or distributor if part is missing or damaged.

2.2 Enclosure

Fiber Optic Modem Top View

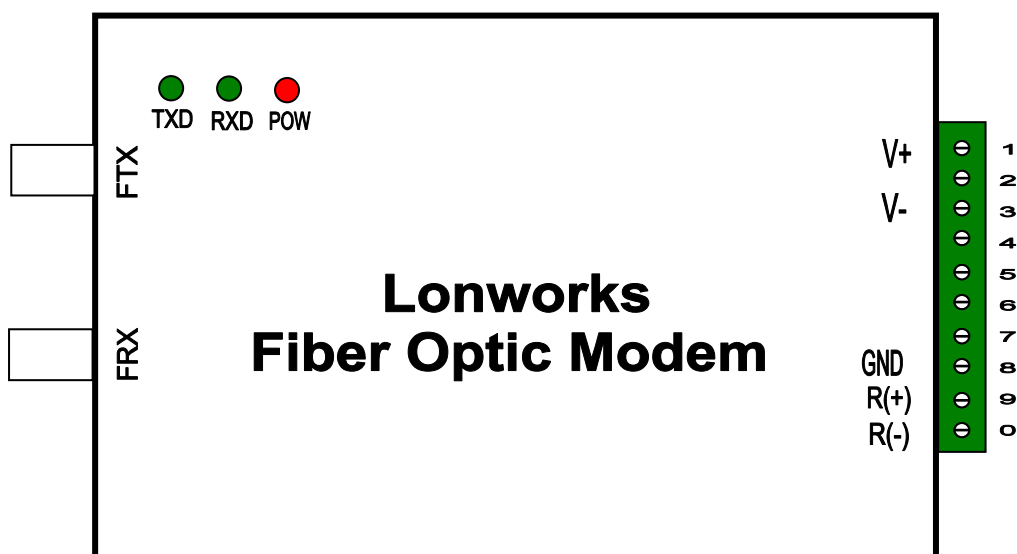

LED Indicators:

POW:	Power Supply,	On if power input is OK.
TX:	Fiber Link,	Flashing if data transmitting is in OK.
RX:	Fiber Link,	Flashing if data receiving is in OK.

Fiber Optic Connectors:

TX:	Transmitter (Fiber Optic ST)
RX:	Receiver (Fiber Optic ST)

Terminal Definition


Terminal pins assignment:

1	V+	Connect 24V power supply”+“
2	N/A	N/A
3	V-	Connect 24V power supply”-“
4	N/A	N/A
5	N/A	N/A
6	N/A	N/A
7	N/A	N/A
8	GND	GND of LON
9	T+	LONA
0	R-	LONB

2.3 Install Methods

1. Switch off all power supply before installation.
2. Connect the local “TX” Fiber Optic to the remote “RX” Fiber Optic, the local “RX” to the remote “TX”. And ensure that fiber is properly aligned to the receiving connector.

2.4 Install Application

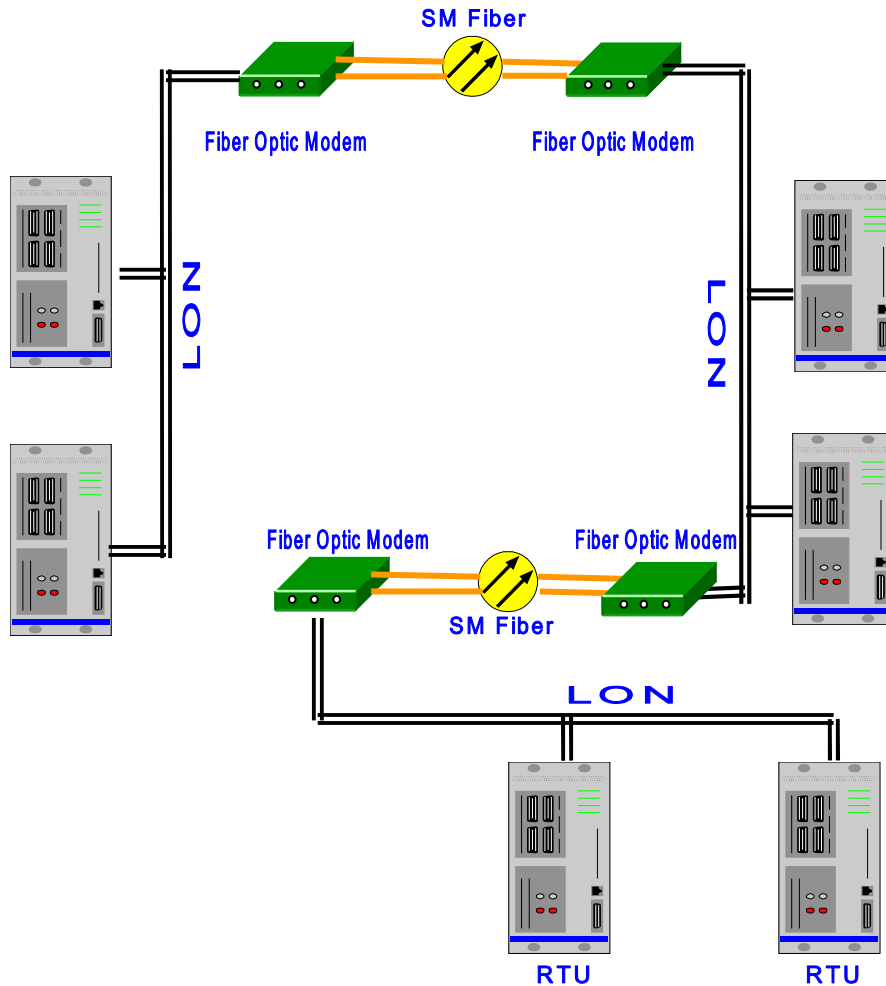

3 Dimensions (mm)

Wall Mount:

